

4th Generation 2 x 30A or 1 x 60A Variable Frequency Drive for AC Induction Motors



Roboteq's SIMG2360T is a features-packed, high-current, dual or single channel drive for AC Induction motors. It is a direct replacement for the company's popular SIM2360T, using a 4th generation processor and implementing many performance, algorithmic, and other qualitative enhancements. The motor can be controlled in Open Loop, Closed Loop Speed, or Torque mode. Advanced control features such as FOC, feedforward control, decoupling control, a 16 kHz current loop, and cascaded control modes ensure precise and efficient motor operation.

The SIMG2360T features several Analog, Pulse and Digital I/Os which can be remapped as command or feedback inputs, limit switches, or many other functions. The SIMG2360T accepts commands received from an RC radio, Analog Joystick, wireless modem, or microcomputer. For mobile robot applications, the Drive's two motor channels can either be operated independently or mixed to move and steer a vehicle. Using CAN bus, up to 127 controllers can be networked at up to 1Mbit/s on a single twisted pair.

Numerous safety features are incorporated into the drive, including Safe Torque Off (STO). The controller's operation can be extensively automated and customized using Basic Language scripts. The drive can be configured, monitored and tuned in realtime using a Roboteq's free PC utility. The drive can also be reprogrammed in the field with the latest features by downloading new operating software from Roboteq.

Applications

- Automatic Guided Vehicles (AGV)
- Small Electric Vehicles, Electric Bikes
- Terrestrial and Underwater Robotic Vehicles
- Police and Military Robots
- Hazardous Material Handling Robots
- Animatronics

Key Features

- USB, Serial, 0-5V Analog, or Pulse (RC radio) command modes
- One RS232 serial port
- CAN bus interface up to 1Mbit/s with multiple protocol support
- RS485 Interface (RS485 is available by special order).
- Auto switch between Serial, USB, CAN, Analog, or Pulse based on user-defined priority
- Built-in dual 3-phase high-power drivers for two AC induction motors at up to 30A
- Support for NTC temperature sensors through analog inputs (requires an external pull-up resistor)
- Output channels can be paralleled in order to drive a single motor at up to 60A
- Field Oriented Control
- Multiple Motor Operating mode
 - Open Loop Volts per Hertz
 - Fixed Slip Control
 - FOC Torque Mode
 - FOC Speed Mode
- Feedforward control
- Cascaded Torque and Speed PI loops.
- High performance 16KHz current loop
- Support for quadrature encoder
- Full forward and reverse motor control. Four quadrant operation.
- Operates from a single 14V-60V power source
- STO-Safe Torque Off support
- Programmable current limit up to 30A (60A on single channel version) per motor for protecting controller, motor, wiring and battery.
- Accurate speed and Odometry measurement using Encoder data

- Up to 8 Analog Inputs for use as command and/or feedback
- Up to 8 Pulse Length, Duty Cycle or Frequency Inputs for use as command and/or feedback
- Up to 10 Digital Inputs for use as Deadman Switch, Limit Switch, Emergency stop or user inputs
- Inputs for up to two Quadrature Encoders
- 4 general purpose 24V, 1.5A open collector outputs for brake release or accessories
- Selectable min/max, center and deadband in Pulse and Analog modes
- Trigger action if Analog, Pulse or Hall counter capture are outside user selectable range (soft limit switches)
- Built-in Battery Voltage and Temperature sensors
- Optional 14V backup power input for powering safely the drive's logic if the main motor batteries are discharged
- Power Control input for turning On or Off the controller from external microcomputer or switch
- Regulated 5V output for powering RC radio, RF Modem, sensors or microcomputer
- Separate Programmable acceleration and deceleration for each motor
- Ultra-efficient 3.3 mOhm ON resistance MOSFETs (1.65 mOhm on Single Channel)
- Stall detection and selectable triggered action if Amps is outside user-selected range
- Short circuit protection
- Overvoltage and Undervoltage protection
- I²T protection
- Watchdog for automatic motor shutdown in case of command loss
- Overtemperature protection
- Diagnostic LED
- Efficient heat sinking. Operates without a fan in most applications.
- Dustproof and weather resistant. IP 40 rating
- Power wiring using screw terminals
- 4.8" (123.0mm) L, 3.3" W (83.0mm), 1.0" (25mm) H
- -10° to +70° C operating environment
- Weight: 0.47 lbs (215g)
- Easy configuration, tuning and monitor using provided PC utility
- Field upgradeable software for installing latest features via the Internet

Orderable Product References

Reference	Number of Channels	Amps/Channel	Volts	STO
SIMG2360T	2	30	60	Yes
SIMG2360TS	1	60	60	No

Warning

A dangerous, uncontrolled motor runaway condition can occur for a number of reasons, including, but not limited to: command or feedback wiring failure, configuration error, faulty firmware, errors in user script or user program, or controller hardware failure.

The user must assume that such failures can occur and must make their system safe in all conditions. Roboteq will not be liable in case of damage or injury as a result of product misuse or failure.

Important Note

All products are not serviceable. If damage is suspected, the item must be replaced rather than repaired.

Attempting to service or repair the product voids any existing warranty and may pose safety risks.

Consult customer support for more information on replacements

Power Terminals Identifications and Connection

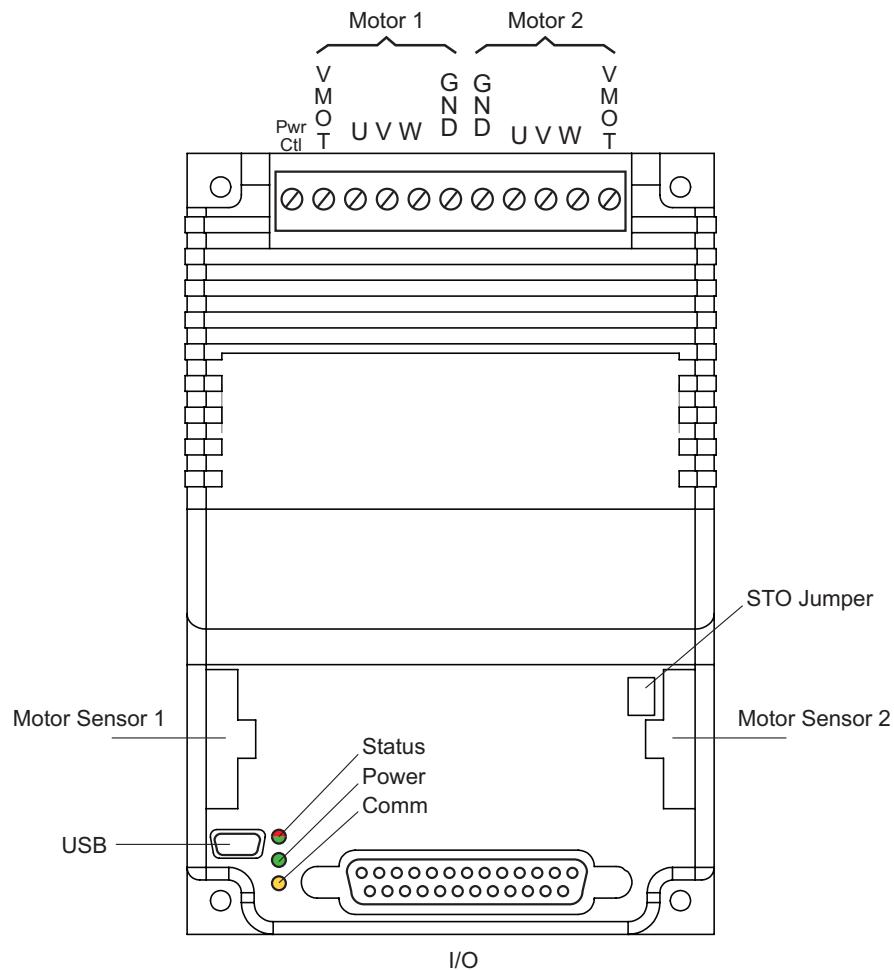


FIGURE 1. SIMG2360T Outline

Figure 2, below, shows how to wire the controller in a dual motor configuration, and how to turn power On and Off.

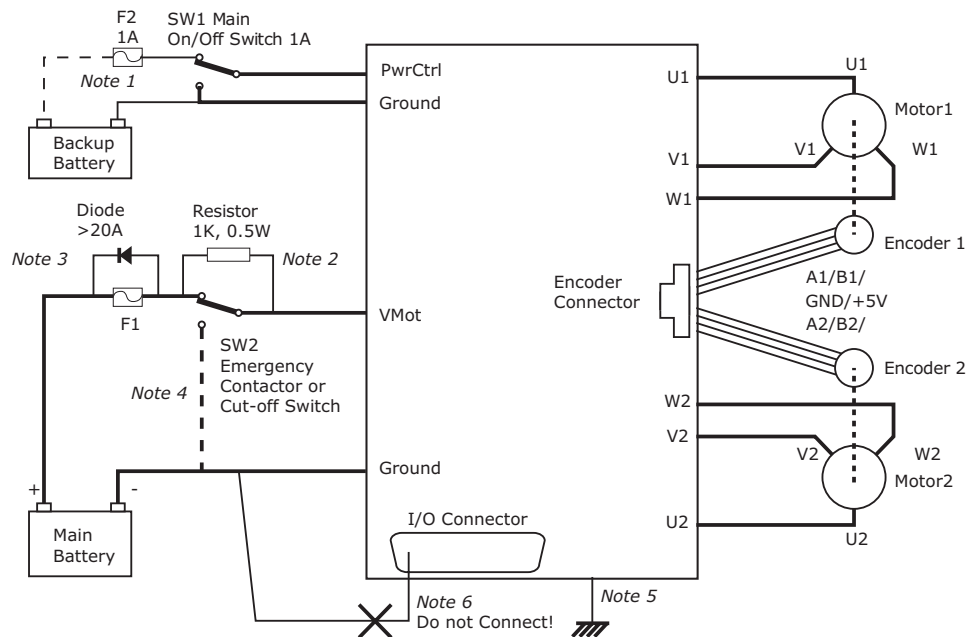


FIGURE 2. Powering the Controller. Thick lines identify MANDATORY connections

Caution

Carefully follow the wiring instructions provided in the Power Connection section of the User Manual. The information on this datasheet is only a summary.

Mandatory Connections

It is imperative that the drive is connected as shown Figure 3. All connections shown as thick black lines line are mandatory. The controller must be powered On/Off using switch SW1 on the PwrCtrl tab. Use a suitable high-current fuse F1.

Precharge Resistor

The controller has 2350uF of internal capacitance which will cause a brief yet significant current inrush the moment power is applied.

Note 2: If there is a concern that this current can overload the power supply or the contactor, insert a precharge resistors as shown in figure 3. For precharging to take place, the controller must be turned off by grounding the Power Control pin.

Enable Safe Torque Off

Note 3: When STO is enabled (STO jumper removed), the motor will be prevented from running until both of its STO inputs are connected to a voltage of 6V or higher. If one or both STO lines are left floating or grounded, the drive will be ON and able to communicate, but the motor will not be driven. For more details, refer to the STO chapter further down in this document and consult the Roboteq Controllers User Manual.

Regeneration Protection and Braking

During rapid deceleration, the kinetic energy will cause regenerative current to flow out of the motor and back to the power source. When using a battery, this current will recharge the battery and create a dynamic braking effect. When a power supply is used, the current will not be able to flow back to the source. Without a return path, the regenerative current can cause the voltage to rise to a dangerous level for the electronics.

Connection to Chassis

Note 4: For improved EMI immunity and reduced emissions, it is recommended to connect the controller's bottom plate to the system's chassis. Note that the integrated controller's ground is not DC-electrically connected to the plate. However, there is a capacitor between the controller's ground and the bottom plate, providing AC conductivity.

Avoid Alternate Ground Paths

Note 5: Be cautious not to create a path between the ground pins on the I/O connector and the battery's negative terminal. An internal connection already exists between the battery's negative pole and the control ground. Avoiding an additional external connection is highly recommended, as this could allow current to circulate in the signal ground, potentially introducing noise into low-power signals. If the main power ground terminal becomes loose or disconnected, very high current from the motor may flow through the signal ground wire, causing damage.

Precautions When Connecting PC via USB

Note 6: Always use a USB isolator to protect both the drive and the PC against potential electrical damage. When using a portable PC, operate it on battery power to avoid creating an accidental return ground path via the charger.

Emergency Switch or Contactor

The battery must be connected Permanently to the controller's Vmot tabs via a high-power emergency switch or contactor SW2. The user must be able to deactivate the switch or contactor at any time, independently of the controller state. SW2 should be used only in emergency situations and not for normal operation. Opening SW2 while the motors are rotating can lead to permanent hardware damage.

Electrostatic Discharge Protection

In accordance with IEC 61000-6-4, Roboteq Motor Controllers are designed to withstand ESD up to 4kV touch and 8kV air gap. This protection is implemented without any additional external connections required. Some specifications, such as EN12895, require a higher level of protection. To maximize ESD protection, up to 8kV touch and 15kV air gap, connect the metallic heatsink of the controller to the battery's negative terminal.

EMI/EMC

All cables, including motor, battery, and control cables, should be kept shorter than 3 meters to minimize EMI/EMC issues. Depending on the source of interference and the cable type, the use of external filters or ferrite chokes may be necessary.

Controller Mounting

The drive should be mounted in such a way that its bottom surface makes direct contact with a metallic surface, such as the system chassis or cabinet. This will assist in dissipating the heat generated during the operation of the controller. It's important to note that the nominal and peak ampere values documented in the datasheet can only be fully achieved with adequate cooling.

Single Channel Wiring

For the Single Channel SIMG2360S, connect each motor wire to both output tabs marked with the same letter, as illustrated in the figure below. Use the Encoders of Channel 1 for operation.

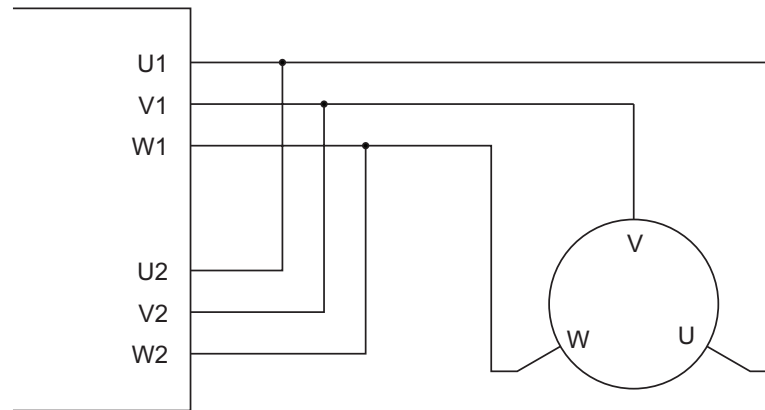


FIGURE 3. Single Channel Wiring Diagram

Caution

The wiring shown in Figure 3 must be done only on the single channel version of the controller. Paralleling the wires on a dual channel product will cause permanent damage. Verify that your controller is an SIMG2360TS before you wire in this manner.

Encoder Connection

Connection to the Encoder is done using a special connector on the front side of the controller. The connector is a 6-pin Molex Microfit 3.0, ref. 43645-0600. Pin assignment is in the table below.

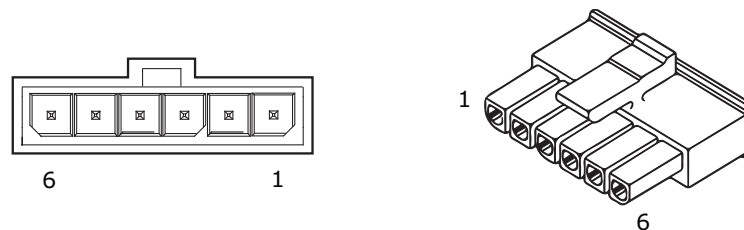


FIGURE 4. Encoder Connector

TABLE 1.

Pin Number	1	2	3	4	5	6
Signal	Ground	Enc A	Enc B			5V

Warning

Encoder 1 and Encoder 2 inputs share pins internally with pulse inputs 5 to 8. If both encoder and pulse inputs are enabled, the encoder will have higher priority. For any modifications involving the use of these shared pins, the drive should be in Open Loop mode, an emergency stop should be activated, and the system must be in a safe position. This precaution is necessary because changing the usage can result in false input readings and unintended motor movement.

Commands and I/O Connections

Connection to RC Radios, Microcomputers, Joysticks and other low current sensors and actuators are done via the 25-pin connector. The functions of many pins vary depending on controller model and user configuration. Pin assignment is found in the table below.

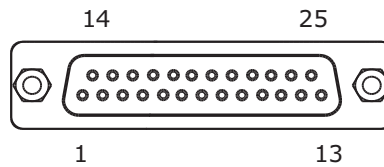


FIGURE 5. Main Connector Pin Locations

TABLE 2.

Connector Pin	Power	Dout	STO	Com	Pulse	Ana	Dinput
1	GND						
14	5VOut						
2				RS TxD			
15					RC1	ANA1	DIN1
3				RS RxD			
16					RC2	ANA2	DIN2
4			STO1 (1)		RC3 (2)	ANA3	DIN3
17			STO2 (1)		RC4 (2)	ANA4	DIN4
5	GND						
18		DOUT1					
6		DOUT2					
19		DOUT3					
7		DOUT4					
20				CANH			
8				CANL			
21					RC5	ANA5	DIN5
9							
22					RC6	ANA6	DIN6
10							
23				RS485+			

TABLE 2.

Connector Pin	Power	Dout	STO	Com	Pulse	Ana	Dinput
11				RS485-			
24					RC7	ANA7	DIN7
12					RC8	ANA8	DIN8
25	5VOut						
13	GND						

Note 1: STO jumper must be removed for STO signals to be active. See STO section for details.

Note 2: Not compatible with MultiPWM

Enabling Analog Commands

For safety reasons, the Analog command mode is disabled by default. To enable the Analog mode, use the PC utility and set Analog in Command Priority 2 or 3 (leave Serial as priority 1). Note that by default, the additional securities are enabled and will prevent the motor from starting unless the potentiometer is centered, or if the voltage is below 0.25V or above 4.75V. Figure 9 shows suggested assignment of Pot 1 to ANA1 and Pot 2 to ANA4. Use the PC utility to enable and assign analog inputs.

Connecting Thermistors

NTC temperature sensors can be connected to the controller's analog inputs. This enables reading of motor temperature through the controller's runtime variables and allows for active temperature protection. This connection can be achieved by using a pull-up resistor with a value equal to the thermistor's resistance between the analog input and the controller's 5V output. For more information about motor temperature readings and controller parameterization, please refer to the Roboteq Controller's User Manual.

USB communication

Use the USB only for configuration, monitoring, and troubleshooting purposes. USB is not a reliable method of communication and can lead to disconnections when used in electrically noisy environments. These disconnections often require resetting the USB connection or even the controller. For more reliable interfacing with a computer, always opt for RS232 communication.

Important Note

Always use a USB isolator to protect both the drive and the PC from potential electrical damage. When using a portable PC, operate it on battery power to avoid an accidental ground path return via the charger.

CAN Communication

CAN is the SIMG2360T's primary and recommended communication interface. Up to 127 drives can be networked on a twisted pair network up to 1000m long and at speeds up to 1Mbit/s. Roboteq support four CAN protocols:

- CANOpen for interoperability with other vendor's DS301 and DS402 compliant devices
- RoboCAN, a simple and effective peer to peer meshed network protocol
- MiniCAN, a simplified subset of CANOpen PDOs
- Raw CAN, a low-level system used with scripting for constructing and parsing CAN frames to handle any protocols

TABLE 3. CANOpen Communications Specification

Feature	Value
Motion Network type	CAN, CANOpen
CANOpen Standards Support	DS301, DS402
Operating Modes	Cyclic sync torque, cyclic sync velocity, cyclic sync position, profile position, profile velocity, profile torque modes, homing
Process Data Objects (PDO)	Cyclic sync and free run modes. Cyclic messages can be set for 20 objects on 4 maps

RS485 Communication

RS485 is a robust industry standard for serial communication, well-suited for long distances and electrically noisy industrial settings. It uses balanced signaling for enhanced stability, allowing the connection of multiple receivers on a single network. The protocol supports half-duplex operation and is particularly compatible with Modbus. The 25-pin connector features designated pins for RS485+ and RS485-.

Please note that RS485 support is optional and available in selected models.

Status LEDs and Flashing Patterns

The controller is equipped with three LEDs. A Green Power LED, a Red/Green Status LED, and a Yellow Communication LED. After the controller is powered on, the Power LED will turn on, indicating that the controller is On. The Status LED will be flashing at a two second interval. The flashing patterns and colors provide operating or exception status information.

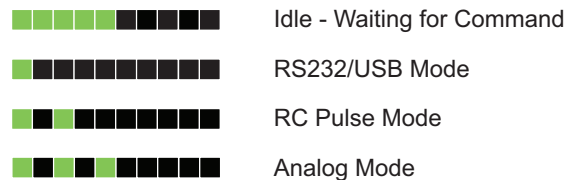


FIGURE 6. Normal Operation Flashing Patterns

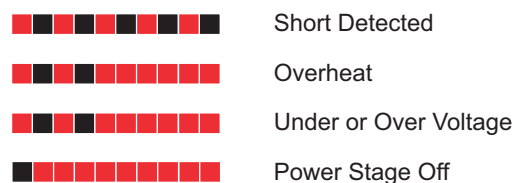


FIGURE 7. Exception or Fault Flashing Patterns

Electrical Specifications

Absolute Maximum Values

The values in the table below should never be exceeded, permanent damage to the controller may result.

TABLE 4.

Parameter	Measure point	Min	Typ	Max	Units
Battery Leads Voltage	Ground to VBat			63 (2)	Volts
Reverse Voltage on Battery Leads	Ground to VBat	-1			Volts
Power Control Voltage	Ground to Pwr Control wire			63 (2)	Volts
Motor Leads Voltage	Ground to U, V, W wires			63 (2)	Volts
Digital Output Voltage	Ground to Output pins			30	Volts
Analog and Digital Inputs Voltage	Ground to any signal pin on 15-pin			30	Volts
Encoder inputs voltage	Ground to Encoder inputs of Molex connector			5.5	Volts
RS232 I/O pins Voltage	External voltage applied to Rx pin			30 (3)	Volts

Note 1: Only PELV/SELV voltages shall be used
 Note 2: Maximum voltage in normal operation, including regeneration. Never inject a DC voltage from a battery or other fixed source
 Note 3: No voltage must be applied on Tx pin

Power Stage Electrical Specifications (at 25°C ambient)

TABLE 5.

Parameter	Measure point	Model	Min	Typ	Max	Units
Battery Leads Voltage	Ground to VMot	All	0 (1)		60	Volts
Output Voltage	Ground to U, V, W wires	All	0 (1)		60 (2)	Volts
Power Control Voltage	Ground to Power Control wire	All	0 (1)		60	Volts
Minimum Operating Voltage	VBat or Pwr Ctrl wires	All	10 (3)			Volts
Over Voltage protection range	Ground to VMot	All	5	60 (4)	60	Volts
Under Voltage protection range	Ground to VMot	All	0	5 (4)	50	Volts
Idle Current Consumption	VMot or Pwr Ctrl wires	All	50	100 (5)	150	mA
ON Resistance (Excluding wire resistance)	VMot to U, V or W. Ground to U, V or W	SIMG23xx		3.3		mOhm
		SIMG23xxS		1.65		mOhm
Max Current for 30s	Motor current	SIMG23xx			30	Amps
		SIMG23xxS			60	Amps
Continuous Max Current per channel	Motor current	SIMG23xx			16 (6)	Amps
		SIMG23xxS			32 (6)	Amps
Current Limit range	Motor current	SIMG23xx	10	30	30	Amps
		SIMG23xxS	20	60	60	Amps
Stall Detection Amps range	Motor current	SIMG23xx	10	30 (7)	30	Amps
		SIMG23xxS	20	60 (7)	60	Amps

TABLE 5.

Parameter	Measure point	Model	Min	Typ	Max	Units
Stall Detection timeout range	Motor current	All	1	500 (8)	65000	msec
Short Circuit Detection threshold (9)	Between Motor wires or Between Motor wires and ground or Between Motor wires and Vmot	SIMG23xx			36 (10)	Amps
		SIMG23xxS			72 (10)	Amps
Short Circuit Detection Threshold	Between Motor wires and VBat No Protection. Permanent damage will occur					
Power cable thickness	Power input and output	All		12		AWG

Note 1: Negative voltage will cause a large surge current. Protection fuse needed if battery polarity inversion is possible
 Note 2: The maximum inverter voltage, including regenerative voltage. Never inject a DC voltage from a battery or other fixed source
 Note 3: Minimum voltage must be present on VBat or Power Control wire
 Note 4: Factory default value. Adjustable in 0.1V increments
 Note 5: Current consumption is lower when higher voltage is applied to the controller's VBat or PwrCtrl wires
 Note 6: Estimate. Limited by case temperature. Current may be higher with better cooling
 Note 7: Factory default value. Adjustable in 0.1A increments
 Note 8: Factory default value. Time in ms that Stall current must be exceeded for detection
 Note 9: Controller will stop until idle command given in case of short circuit detection
 Note 10: RMS value

Command, I/O and Sensor Signals Specifications

TABLE 6.

Parameter	Measure point	Min	Typ	Max	Units
Main 5V Output Voltage	Ground to 5V pins on	4.6	4.75	4.9	Volts
5V Output Current	5V pins on Molex and DSub25			150 (1)	mA
Digital Output Voltage	Ground to Output pins			30 (2)	Volts
Output On resistance	Output pin to ground		0.25	0.5	Ohm
Output Short circuit threshold	Output pin	1.7		3.5	Amps
Digital Output Current	Output pins, sink current			1.5 (2)	Amps
Input Impedances (except DIN7-8)	AIN/DIN Input to Ground		53		kOhm
Digital Input 0 Level	Ground to Input pins	-1		1	Volts
Digital Input 1 Level	Ground to Input pins	3.8		30	Volts
Analog Input Range	Ground to Input pins	0		5.1	Volts
Analog Input Precision	Ground to Input pins		0.5		%
Analog Input Resolution	Ground to Input pins		1		mV
Pulse durations	Pulse inputs	20000		10	us
Pulse repeat rate	Pulse inputs	50		250	Hz
Pulse Capture Resolution	Pulse inputs		1		us
Minimum Pulse on or Pulse off duration	Pulse inputs	25			us

TABLE 6.

Parameter	Measure point	Min	Typ	Max	Units
Frequency Capture	Pulse inputs	100		2000	Hz
Encoder Frequency				200	kHz
SSI clock frequency (3)	SSI clock pin			680	KHz
Note 1: Sum of all 5VOut outputs Note 2: Outputs are Open Drain. They pull to ground when on and float when off. Load must be connected between output and positive voltage Note 3: The "First Clock Delay" function is not supported.					

Operating & Timing Specifications

TABLE 7.

Parameter	Measure Point	Min	Typ	Max	Units
Command Latency	Command to output change	0	0.5	1	ms
Maximum PWM duty cycle	Motor Output			94	%
Closed Loop update rate	Internal		1000		Hz
Current Loop update rate	Internal		16000		Hz
RS232 baud rate	Rx & Tx pins		115200 (1)		Bits/s
RS232 Watchdog timeout	Rx pin	1 (2)		65000	ms
Note 1: 115200, 8-bit, no parity, 1 stop bit, no flow control Note 2: May be disabled with value 0					

Motor Characteristics Requirement for FOC current control

For FOC speed and torque, if the resulted rotor resistance value (R_r) is less than 15 mOhm and the resulted rotor time constant (T_r) is more than 250 msec, slightly lower torque performance may be experienced in a specific speed range.

R_r : Rotor resistance value T_r : Rotor time constant (L_r/R_r , where L_r is the rotor inductance)

Scripting

TABLE 8.

Parameter	Measure Point	Min	Typ	Max	Units
Scripting Flash Memory	Internal		32000		Bytes
Integer Variables	Internal		4096		Words (1)
Boolean Variables	Internal		8192		Symbols
Execution Speed (2)	Internal	30,000		70,000	Lines/s
Note 1: 32-bit words Note 2: Execution Speed was calculated based on low communication load with the controller. In high communication workload, minimum time might be reduced drastically.					

Thermal and Environmental Specifications

TABLE 9.

Parameter	Measure Point	Min	Typ	Max	Units
Heatsink Temperature	External heatsink			75 (1)	°C
Thermal Protection range	PCB	0		90 (2)	°C
Power Dissipation	Case			10	Watts
Thermal resistance	Power MOSFETs to plate			0.8	°C/W
Humidity	Case			93 (6)	%
Ambient temperature	Ambient	-10		70	°C
Storage temperature	Ambient	-20		80	°C
Pollution Degree	-	PD 2 (7)			
Fast fuse to install(3)(4)	SIMG23xx	30	2 x 30		Amps
	SIMG23xxS		2 x 30		Amps
Overload protection	-	Check Note 5			

Note 1: The motor drive features overtemperature protection, derating current and power when internal temperature reaches 85°C. Keep the cooling plate temperature below 75°C to maintain rated current at maximum ambient temperatures.

Note 2: Max allowed power will start degrade from from the selected value.

Note 3: There are two power terminal inputs. Fuse should be installed in both of them for safety.

Note 4: In dual channel controller, for operating only one channel install 30A fuse and for operating both channels 2 x 30A fuse should be installed. Power source must be capable to blow the fuse instantly in case of short circuit

Note 5: Current limiting mechanism available through firmware. External overload motor protection can be used if required (provided by user)

Note 6: Non-condensing

Note 7: The product was evaluated for use in and under the provisions for installation in a Pollution Degree 2 environment.

STO Specifications

TABLE 10.

Parameter	Measure Point	Min	Typ	Max	Units
STO Input High Level	Ground to STO input pin		6	30 (1)	Volts
STO Input Low Level	Ground to STO input pin		0	1	Volts
STO Response Time	Input to output change		5		msec
STO Self Check Time	Internal		1080		msec
Cable Length	2			m	
EMC Immunity	According to IEC 61800-3 and IEC 61800-5-2 Annex E				
CE Declaration	Available at www.roboteq.com				

Mechanical Specifications

TABLE 11.

Parameter	Measure Point	Min	Typ	Max	Units
Weight	Board		215 (0.47)		g (lbs)
Power Connectors Wiring	Screw terminal	22		12	AWG
Torque	D-sub standard connector		0.4 (3.54)		Nm (in-lbs)
Torque	Terminal block		0.8 (7.10)		Nm (in-lbs)
Torque	Mounting screws (4/M2.5)		0.36 (3.2)		Nm (in-lbs)
IP rating	IP40				

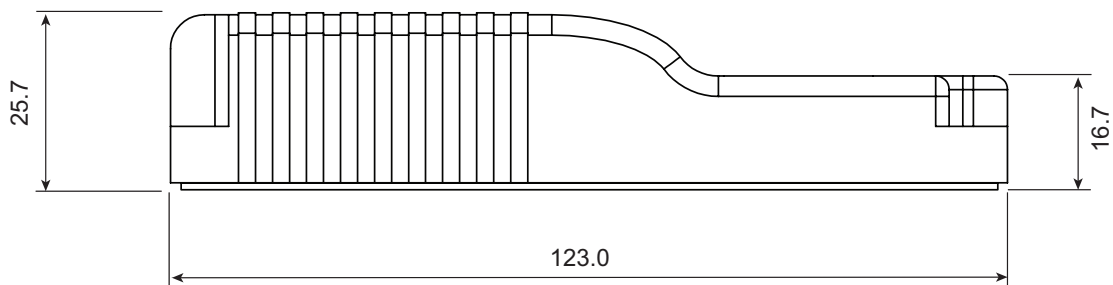


FIGURE 10. SIMG23xx Side View and Dimensions

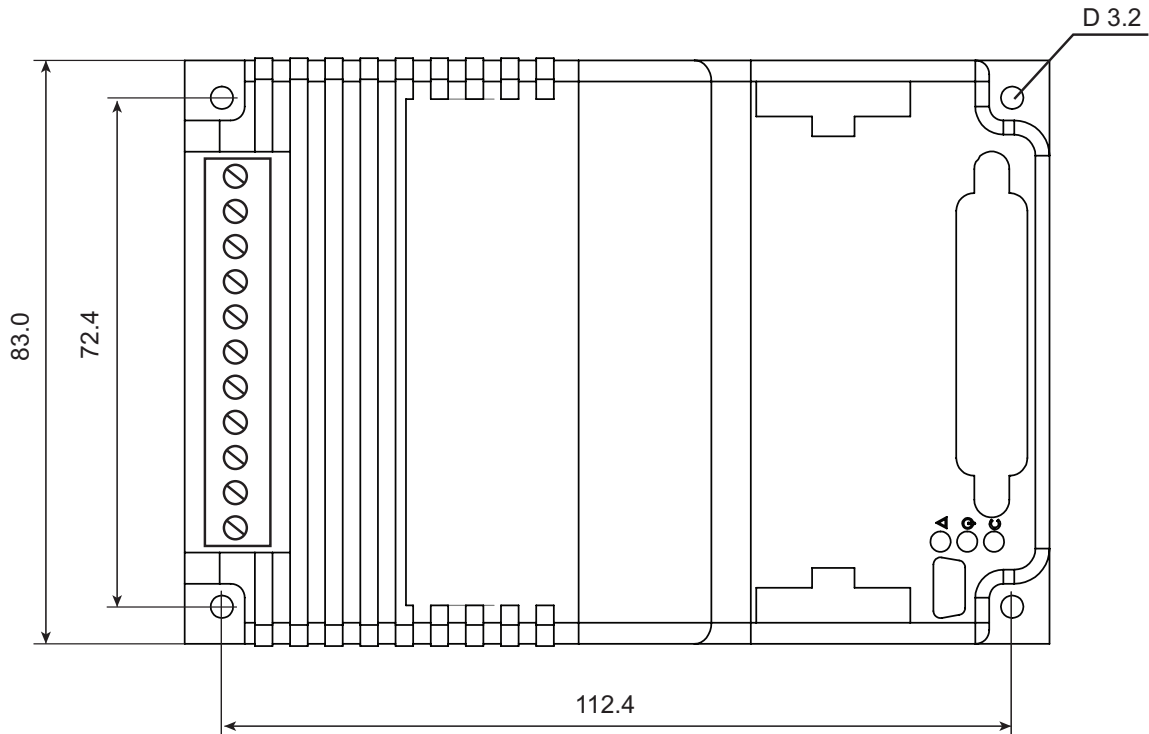


FIGURE 11. SIMG23xx Top View and Dimensions